


# LB1YA3

LOADBANK 250

## YA3 MCCB INCOMER HOUSING

## FITTING INSTRUCTIONS

SHEET I OF 2

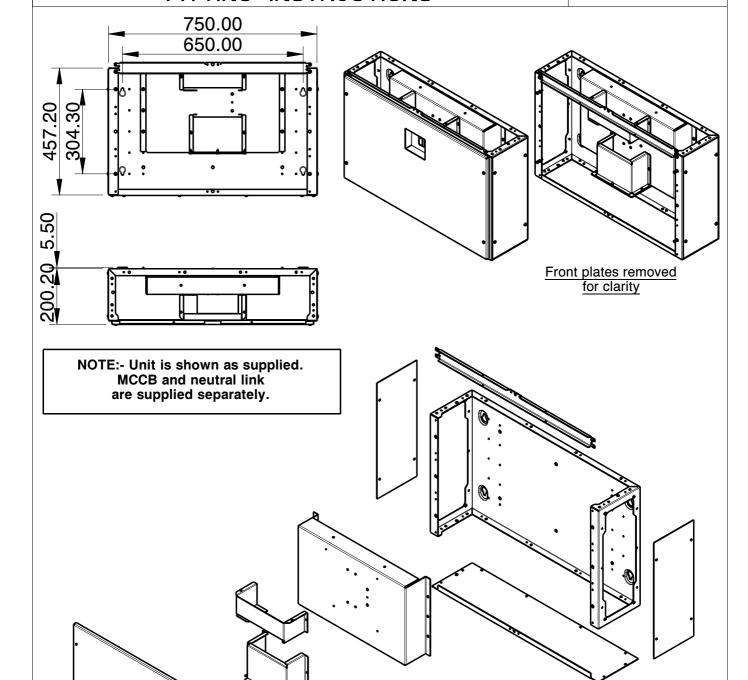

filler shrouds are also supplied along with all necessary fastenings.
See sheet 2.

#### **TESTING AND COMMISSIONING**

SN98246C

Before the unit and the installation of which it forms a part are commissioned they must be tested, in accordance with the requirements of the latest edition of the Requirements for Electrical Installations.

Installation and operation must be in accordance with published data, instructions and diagrams and any relevant national and local regulations

DRG | M216834 | REV | 1

Side plates, busbar connections, extension terminals & connection




# LB1YA3

LOADBANK 250

### YA3 MCCB INCOMER HOUSING

### FITTING INSTRUCTIONS

SHEET 2 OF 2

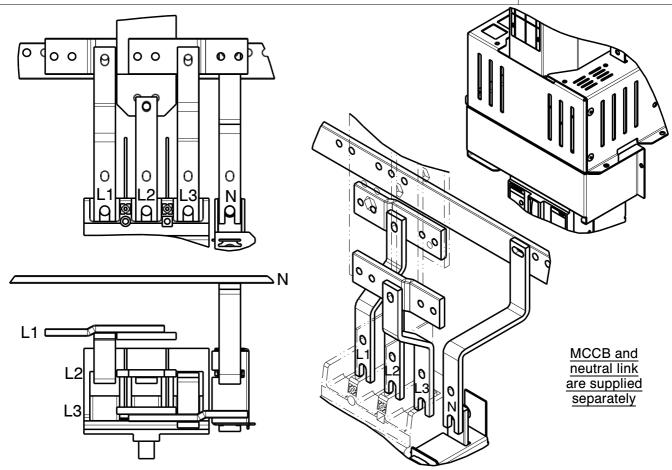

#### FITTING MCCB AND CONNECTIONS

NOTE: When mounted above a panelboard, for top cable access, turn the unit upside down so that the MCCB mounting plate is closest to the busbars.

- 1) Remove all front/end plates and fix the unit to the wall using suitable bolts (not supplied).
- 2) Bolt the unit to the panelboard housing using the M6 x 16 bolts and washers supplied in the cross strap fastener kit.
- 3) Remove top and bottom shrouds and mount the YA3/YB3 frame MCCB to the mounting plate using the screws supplied with the MCCB. Refer to instructions supplied with MCCB for torque figures, setting details and additional information concerning the MCCB.
- 4) If required mount the neutral link to the right of the MCCB with the self tapping screws supplied with the neutral link kit.
- 5) Fit the connections between the MCCB and busbars as shown above.
- 6) Fit the interphase barriers supplied with the MCCB to the top of the MCCB
- 7) Install incoming cables using approprite cable glands and sockets. To avoid swarf and other foreign objects entering the enclosure always remove gland plates to cut cable / trunking entries.
- 8) Check the tightness of all connections and refit all shrouds
- 9) Use the earth kit required to attach earth connection to either end of unit as required.
- 10) Refit cross straps and front plates. **NOTE:** Before fitting the front cover check the tightness of connections and ensure that all shrouds are correctly located and secured in place.

RECOMMENDED TORQUE FIGURES (unless otherwise stated)						
SIZE	M5	М6	M8	M10	M12	M16
TORQUE Nm	5.5	9.5	17	28	45	91



Dorman Smith Switchgear Limited 8 Swinbourne Drive, Springwood Industrial Estate Braintree, Essex CM7 2YG,United Kingdom

Tel: +44(0) 844 225 1063 Fax: +44 (0) 844 225 1064 Email: sales@dormansmith.co.uk www.dormansmithswitchgear.com