


# LF806YA3 & LF810YA3

## LOADBANK 250

## 800A FORM 4 YA3/YB3 MCCB PANELBOARD

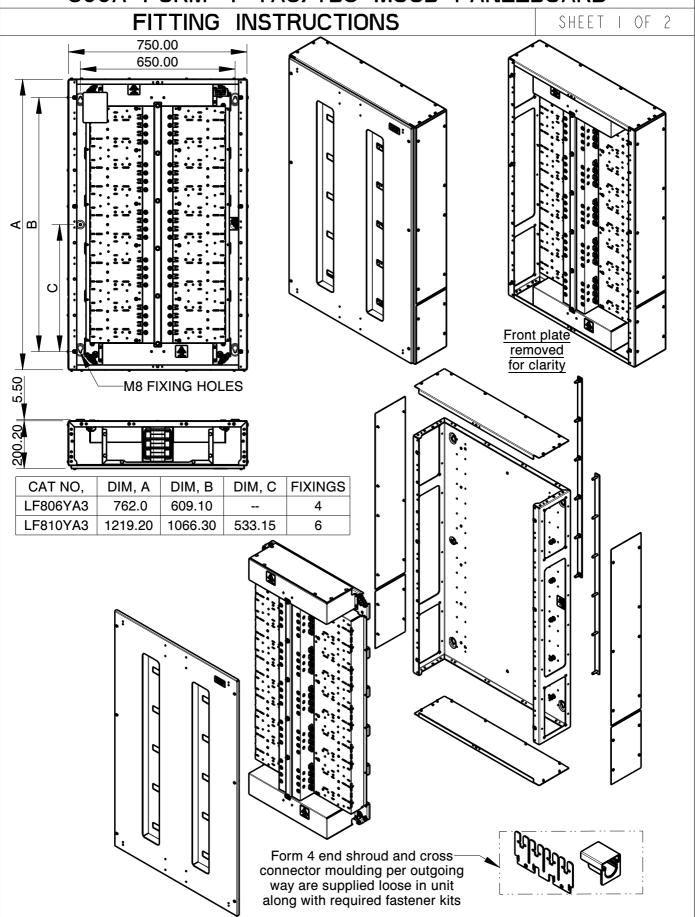

Installation and operation must be in accordance with published data, instructions and diagrams and any relevant national and local regulations




# LF806YA3 & LF810YA3

LOADBANK 250

## 800A FORM 4 YA3/YB3 MCCB PANELBOARD

### FITTING INSTRUCTIONS

SHEET 2 OF 2

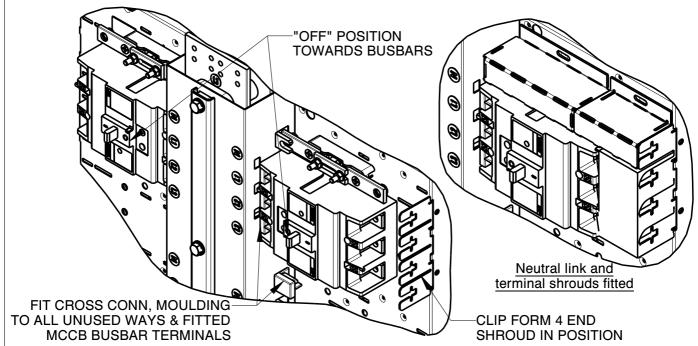

#### **TESTING AND COMMISSIONING**

Before the unit and the installation of which it forms a part are commissioned they must be tested, in accordance with the requirements of the latest edition of the Requirements for Electrical Installations.

#### FITTING ENCLOSURE

- 1) Remove all front/end plates and fix the unit to the wall using suitable bolts (not supplied).
- 2) Enclosures for incoming devices or horizontal busbars may be fitted above or below the unit. Refer to the relevant catalogue for a full list.

### **FITTING DEVICES**

- 1) Ensure supply to the unit is switched off before removing front plate.
- 2) Align the MCCB to the terminals with the "OFF" position towards the busbars as shown above, taking care with the phase orientation, and fasten to the mounting plate with the screws supplied with the MCCB. **NOTE:** 4 pole devices can be fitted to the left hand side of the panel only.
- 3) If a neutral link is required use cat. no. YA3F4NL fitted in position as shown above.
- 4) Fully tighten the busbar connections. Refer to instructions supplied with MCCB for torque figures setting details and additional information concerning the MCCB.
- 5) Clip the supplied clear plastic form 4 end shroud into the mounting plate.
- 6) Install incoming cables using approprite cable glands and sockets and run cables through the slots in the form 4 end shroud. Slots may need to be enlarged for larger cables. To avoid swarf and other foreign objects entering the enclosure always remove gland plates to cut cable / trunking entries.
- 7) Slide cable lug terminal shroud, cat no. YA3TS3P, YB3TS3P, (3 pole) or YA3TS4P, YB3TS4P (4 pole), onto the end of the MCCB and down over the cables ensuring that the form 4 end shroud locates into the slot in the shroud.
- 8) **NOTE:** All unused outgoing ways & the busbar terminal screws of fitted MCCBs must be fitted with cross connection mouldings supplied. Unused ways in front plate can be blanked off using supplied blanks.
- 9) Use the earth kit required to attach earth connection to either end of unit as required.
- 10) Refit cross straps and front plates.

	RECOMMENDED TORQUE FIGURES						
SIZE	M5	М6	М8	M10	M12	M16	
TORQUE Nm	5.5	9.5	17	28	45	91	



Dorman Smith Switchgear Limited 8 Swinbourne Drive, Springwood Industrial Estate Braintree, Essex CM7 2YG,United Kingdom

Tel: +44(0) 844 225 1063 Fax: +44 (0) 844 225 1064 Email: sales@dormansmith.co.uk www.dormansmithswitchgear.com