


MHYA6X2

MODIS 12 ULTRA

HOUSING FOR 2 X YA6 MCCB

FITTING INSTRUCTIONS

SHEET I OF 2

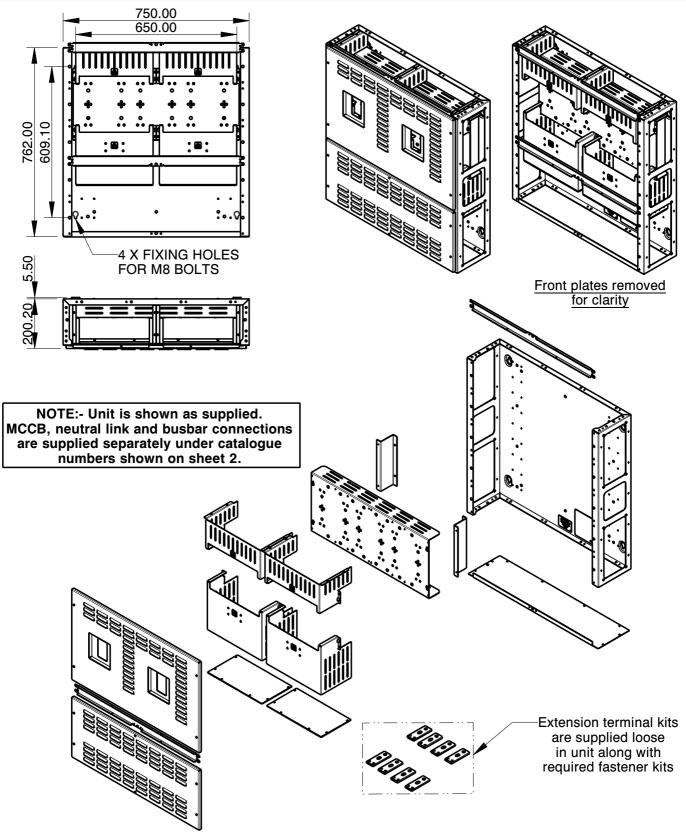

TESTING AND COMMISSIONING

Before the unit and the installation of which it forms a part are commissioned they must be tested, in accordance with the requirements of the latest edition of the Requirements for Electrical Installations.

Installation and operation must be in accordance with published data, instructions and diagrams and any relevant national and local regulations




MHYA6X2

MODIS 12 ULTRA


HOUSING FOR 2 X YA6 MCCB

FITTING INSTRUCTIONS

SHEET 2 OF 2

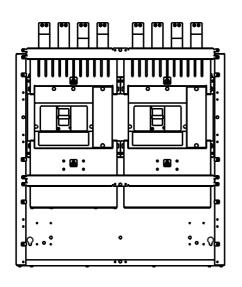

Front plates removed and shrouds dimmed for clarity

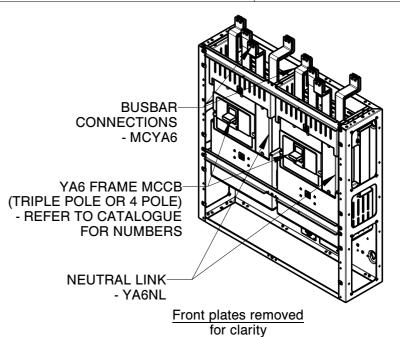

FITTING MCCB AND CONNECTIONS

NOTE: If used as an outgoing unit, this enclosure should <u>NOT</u> be mounted below the horizontal busbar. When mounted above the horizontal busbars, for top cable access, turn the unit upside down so that the MCCB mounting plate is closest to the busbars. Front plates can be refitted in their original orientation ie with louvres opening downwards.

- 1) Remove all front/end plates and fix the unit to the wall using suitable bolts (not supplied).
- 2) Bolt the unit to the horizontal busbar housing using the M6 x 16 bolts and washers supplied in the cross strap fastener kit.
- 3) Remove top and bottom shrouds and mount the YA6 frame MCCBs to the mounting plate using the screws supplied with the MCCB. Refer to instructions supplied with MCCB for torque figures, setting details and additional information concerning the MCCB.
- 4) If required mount the neutral link to the right of the MCCBs with the self tapping screws supplied with the neutral link kit.
- 5) Fit the extension terminal kit supplied to the incoming terminals of the MCCBs. Instructions are supplied with the kit.
- 6) Fit the connections between the MCCBs and busbars. Instructions are supplied with the kit.
- 7) Install incoming cables using approprite cable glands and sockets. To avoid swarf and other foreign objects entering the enclosure always remove gland plates to cut cable / trunking entries.
- 8) Check the tightness of all connections and refit top and bottom shrouds ensuring interphase barriers fixed to the bottom shroud are in between the phases of the incoming supply.
- 9) Use the earth kit required to attach earth connection to either end of unit as required.
- 10) Refit cross straps and front plates. **NOTE:** Before fitting the front cover check the tightness ofconnections and ensure that all shrouds are correctly located and secured in place.

RECOMMENDED TORQUE FIGURES (unless otherwise stated)						
SIZE	M5	М6	M8	M10	M12	M16
TORQUE Nm	5.5	9.5	17	28	45	91



Dorman Smith Switchgear Limited 8 Swinbourne Drive, Springwood Industrial Estate Braintree, Essex CM7 2YG.United Kingdom

Tel: +44(0) 844 225 1063 Fax: +44 (0) 844 225 1064 Email: sales@dormansmith.co.uk www.dormansmithswitchgear.com