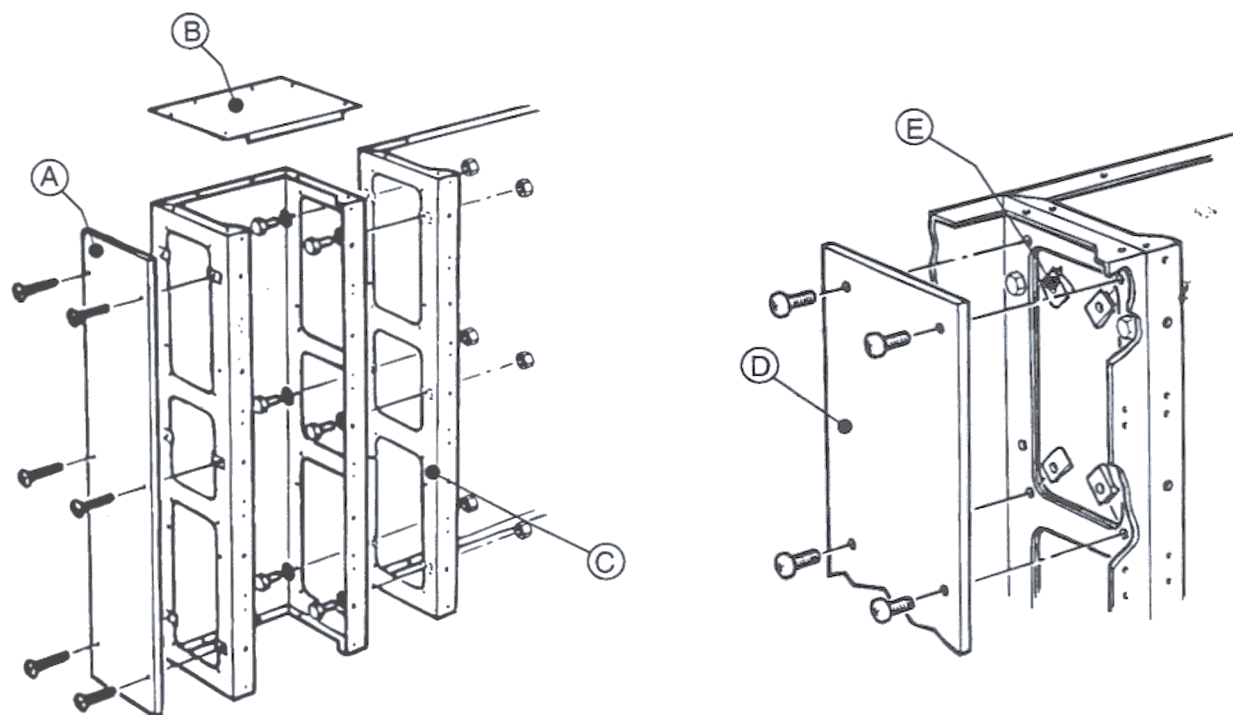


Assembly/Installation instructions


- 1** Remove side plate (A) from the fuse switch panel board.
- 2** Remove small fitted spirenuts (C) from the panel board side. Use a screwdriver to prise them off.
- 3** Remove the front and end plates from the cableway.
- 4** Fasten the cableway to the panel board using the M8 x 16 Hex. hd screws, nuts and washers provided.
- 5** Fit the large loose spirenuts (E) as shown, to the panel board/cableway slots.
- 6** Cut out the necessary apertures for cables and glands etc. in the end plate(s) (B).
- 7** On completion of cabling re-fit the end plate(s) (B) cut out the necessary apertures in the internal shield (D) and fit in position using the No. 10 posi. pan. hd. screws provided.
- 8** Reposition the side plate (A) on the cableway and re-fit the front plate.

Key to component parts

- A** Dished side plate.
- B** End Plate, cableway.
- C** Spirenuts, (small) fitted to panel board side.
- D** Flat insul. sheet.
- E** Spirenuts (large) loose, to be fitted to panel board/cableway slots

This equipment must be installed in accordance with the requirements of all relevant legislation, regulations (including the latest edition of the IEE wiring regulations) and the accepted practice in the industry.

