


DOORS FOR FORM 4 PANELBOARDS FITTING INSTRUCTIONS

SHEET 1 OF 1

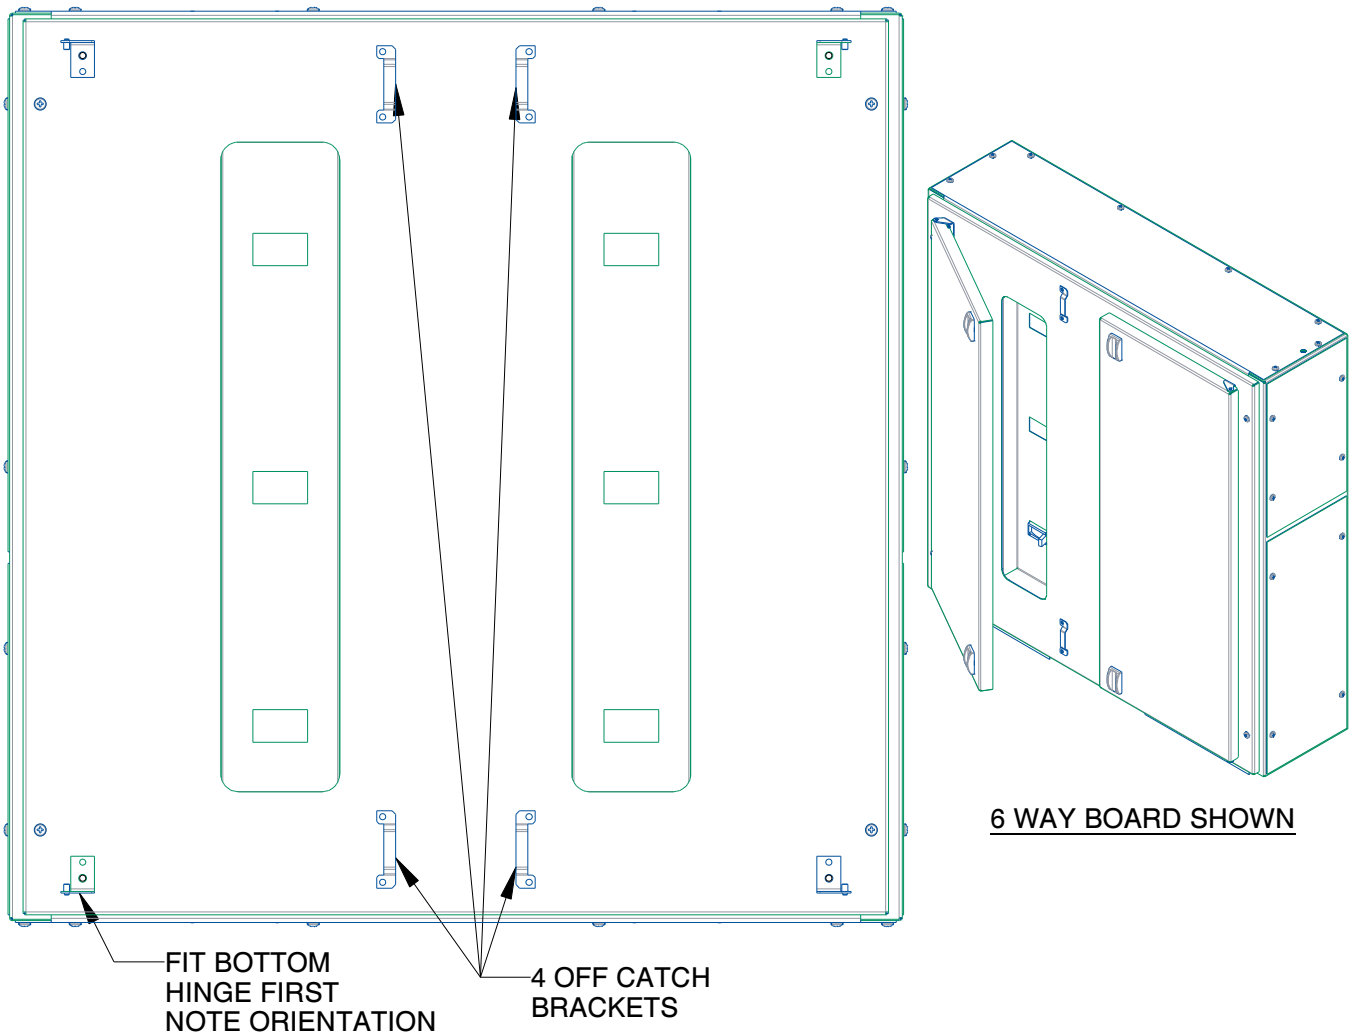

FITTING INSTRUCTIONS

- 1) Remove the front plate from the panel board.
- 2) Locate and knockout the 12 knockouts in the panelboard front plate.
- 3) Fit 4 x catch brackets as shown above using M5 nuts, bolts and washers supplied taking note of the orientation of the brackets.
- 4) Fit the bottom hinge to the plate on one side using the M5 fasteners, again noting the orientation of the bracket with the hinge pin biased towards the edge of the panel.
- 5) Fit the door onto the lower hinge pin, fit the top hinge pin onto the door and fasten the top hinge to the plate with the M5 fasteners thus securing the plate. NOTE: the top and bottom hinge assemblies are opposite handed.
- 6) Repeat 4) and 5) for the door on the opposite side of the panel.
- 7) Fit the cover catch mouldings through the holes in the plates and turn to keep the door closed.
- 8) Refit the front plate and doors to the panel board.

Installation and operation must be in accordance with published data, instructions and diagrams and any relevant national and local regulations